Sheeting Angle RA1
Attach to each Purlin with
(1) Fastener #1B
$\frac{1}{4}$"−14 x 1$\frac{1}{4}$" DP3
(Field Notch at Shop Welded
Purlin Clips when Offset is 4")

$\mathbb{C}$ Girt and
Rafter

Offset 4" (w/8" Girts)
5" (w/10" Girts)
6" (w/12" Girts)
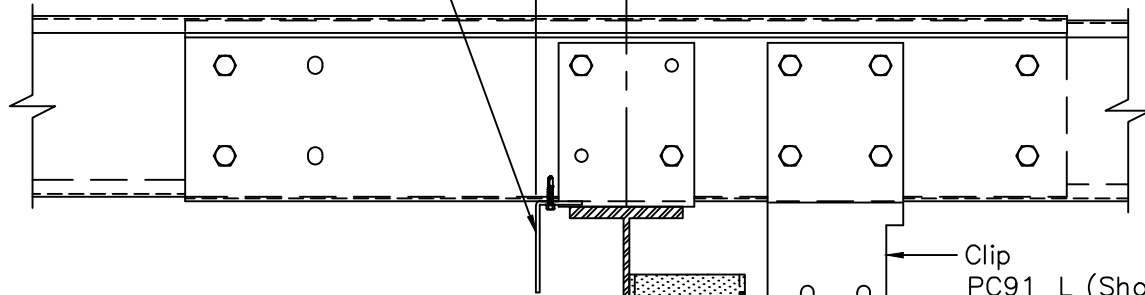
Clip
PC91_L (Shown)
PC91_R (Opposite)
attach to Purlin web
w/(4) $\frac{1}{2}$"ø Bolts

(4) $\frac{1}{2}$"ø Bolts

(2) $\frac{1}{2}$"ø Bolts with
$\frac{1}{2}$" Washers WFH500
Slot side

Clip PC90_
or
Bracket BB___

Typical Flush Girt attachment, attach
with (2) $\frac{1}{2}$"ø Bolts to Shop Welded
Clip (See "Transverse Partition
Framing Elevation" for locations)

Flush Partition Column
(See "Transverse Partition Framing
Elevation" for locations and Flange
Brace requirements, if required)

Sheeting Clip
CL292 or PC30_
(1) Fastener #12A
12−14 x 1" DP3
at each end

Partition Base Framing
Standard Base Angle RA1 shown,
may vary. (See "Transverse Partition
Framing Elevation" for requirement.)

Field Cut Partition
Base Framing at
Column

$\frac{1}{4}$"ø Anchor (Min.)
60" o.c. (Max.)
Not by Bldg. Mfr.

Zee Girts shown, attachment
similar for Cee or Zee Girt
with outer flange toed up.